

Dishwash Guide



Remove waste food from all items. Soak any stubborn items prior in a hand wash solution.



Stack the shelves with items facing the same direction and by size. Stack cutlery in baskets.



Once cycle finished, switch off the electric supply. Empty the machine. Remove any scrap trays.



Clean the dishwasher and leave the door open slightly to air dry.

WARNING



- Always read chemical label before use
- When changing products always advised PPE
 - Check Drums regularly
 - Do not allow to run dry
- Always wear PPE when changing over drums and tubes

Products to use:

Universal Machine Detergent



A powerful dishwash detergent that leaves dishware sparkling clean whilst removing tea and coffee stains. Suitable for use in all water conditions in all types of dishwashers.

Universal Rinse Aid



A mildly acidic rinse aid, suitable for use in all types of dishwashers. Disperses easily, reduces surface tension, eliminates spotting and decreases drying time without streaking.

